DISPLACER CHAMBER 204DC

A displacer chamber is mounted on the side of the vessel, and the transmitter at its top flange.

Displacer chambers are offered in four vessel mounting arrangements (see illustration right: "Side-Side").

All mounting arrangements are also available with **heating** jacket.

The valves, etc. are to procure on site.

For use as a part of an overfill protection, the same length "L" of displacer and "h" of chamber is required.

Materials, Pressure Ratings, Flange Sizes, Contact Faces, Pipe Sizes,

Drain Types: Flange, Screw, Pipe piece for welding **Heating Jacket**

see Model Codes on following pages.

Overview: Types of Transmitters

We offer both Level transmitters for flange mounting and for sandwich assembly, depending on the measurement task.







